

DB-EA4D CLEANING GUIDE v1.0

CLEANING THE UPPER AND LOWER ROLLERS




1. Open the printer lid by pressing and releasing the OPEN button.



2. Locate and carefully lift the small green levers at both ends of the roller.



3. Remove the roller from printer and clean using Platen Cleaner Spray and a Lint Free Cloth.

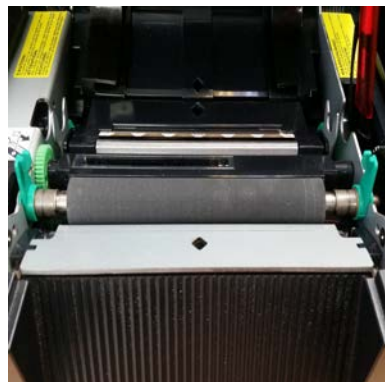

4. Insert the roller back into the printer. Ensure that the green levers are slotted in the metal guide slots.



5. Careful lower the green levers until they click into place.

REPEAT ABOVE FOR THE UPPER ROLLER

DB-EA4D CLEANING GUIDE v1.0

CLEANING THE INSIDE OF THE PRINTER



Ensure that all the paper dust and debris is carefully removed using a General Purpose Wipe or General Cleaning Spray and a Lint Free Cloth.

CLEANING THE PRINT HEADS



Using a Print Head Cleaning Wipe, ensure that all the paper dust and debris is carefully removed from print heads. Clean using a gentle left to right motion.

✓ BEST PRACTICE WEEKLY MAINTENANCE ✓